



WIRE DIAGRAMS AND SCHEMATICS

For Heat Unit Models:

- HHP-SB-EXT-6
- HHP-SB-EXT
- HHP-SB-PT





For assistance with heat unit questions please contact
Lockwood Customer Service.


Email: customerservice@lockwoodusa.com

Phone: (734) 425-5330

Web: www.lockwoodusa.com

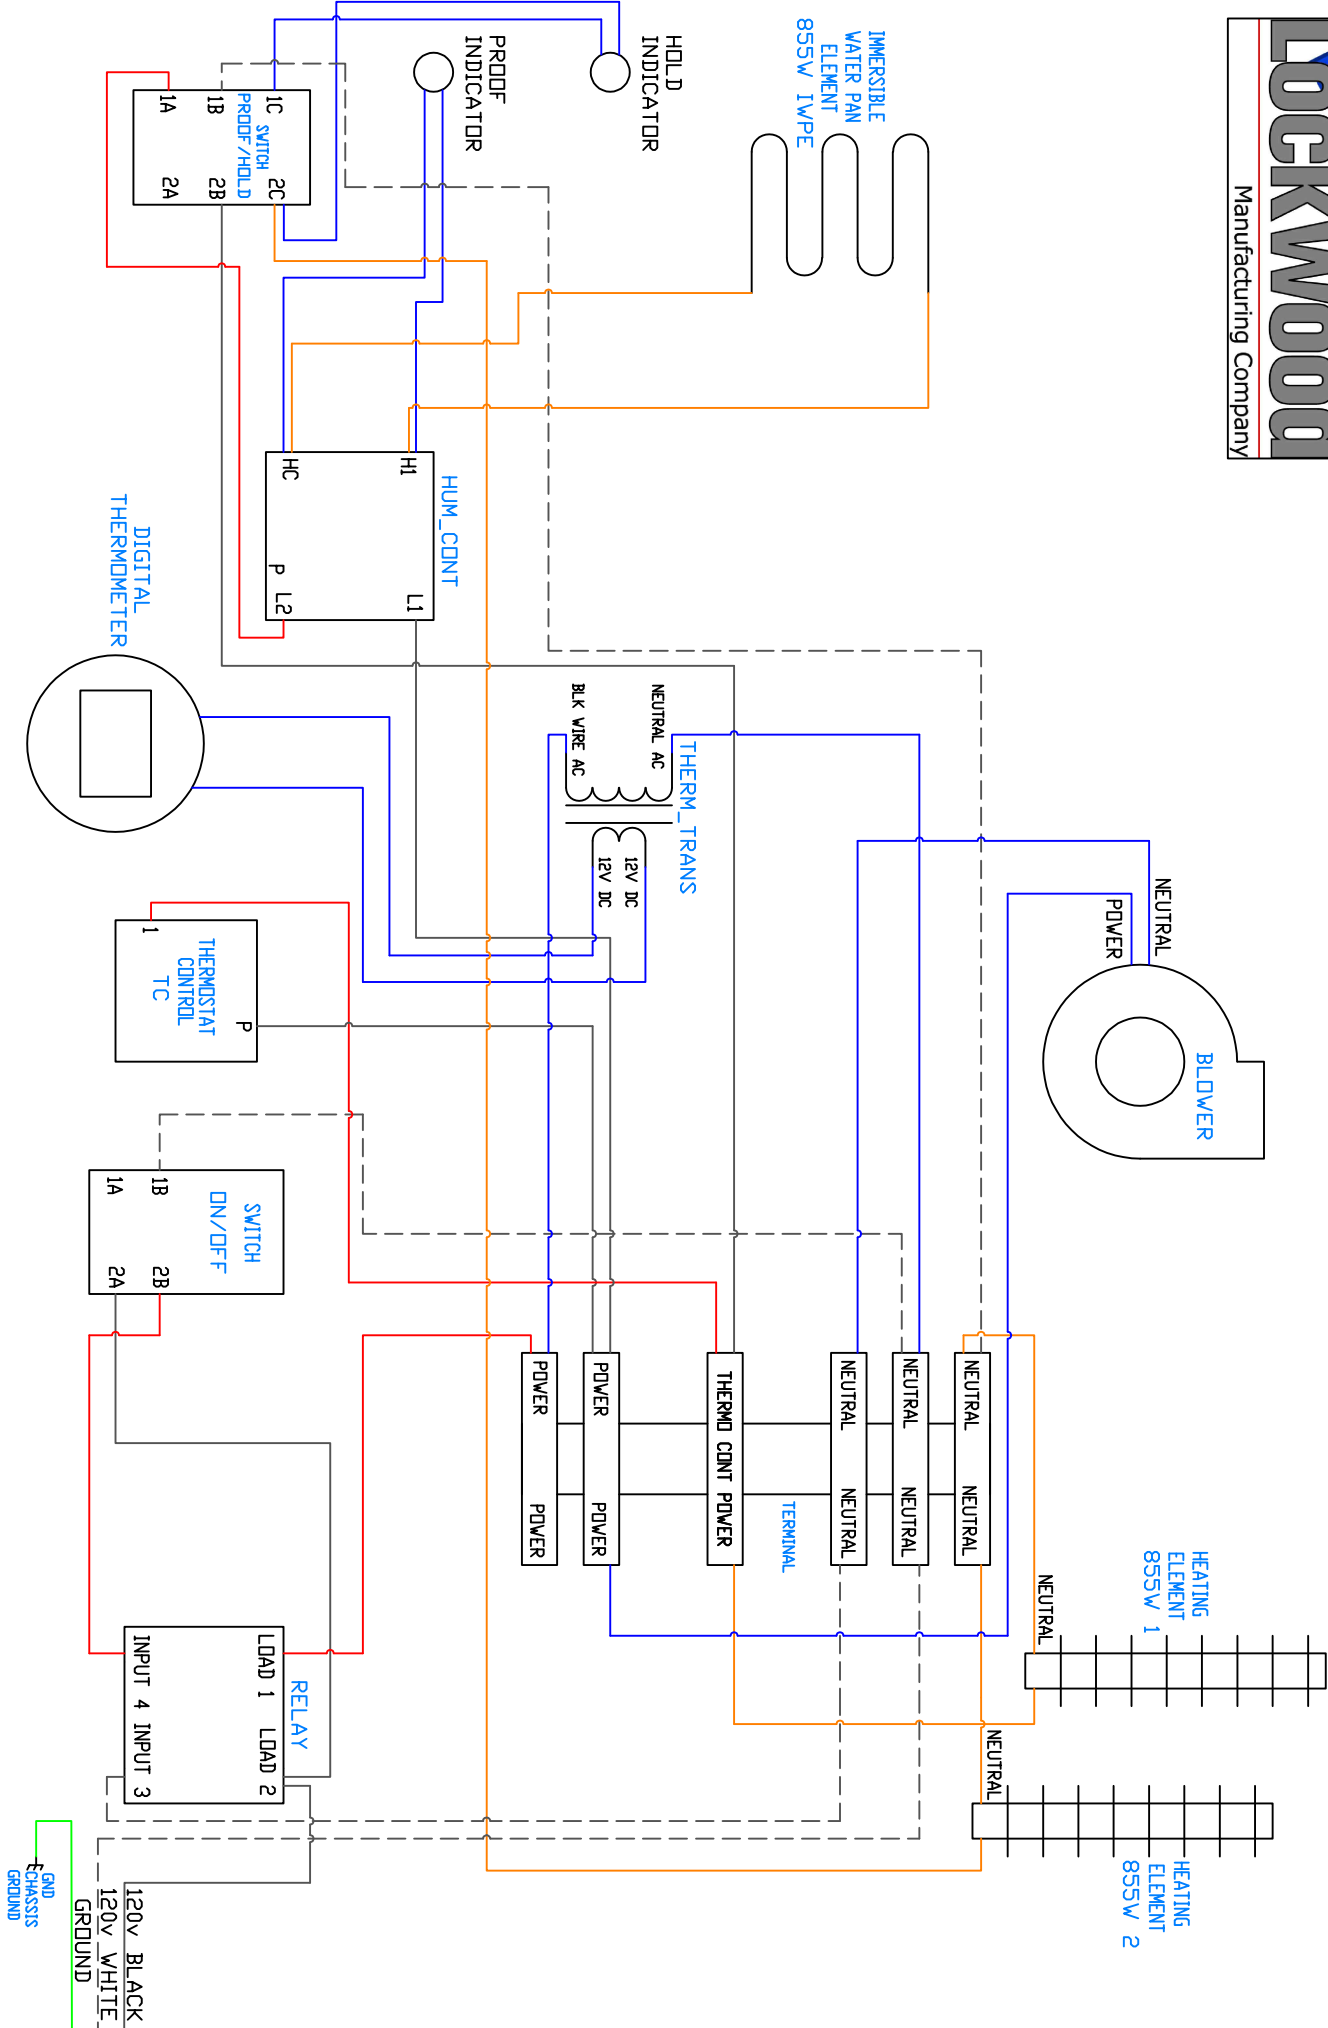

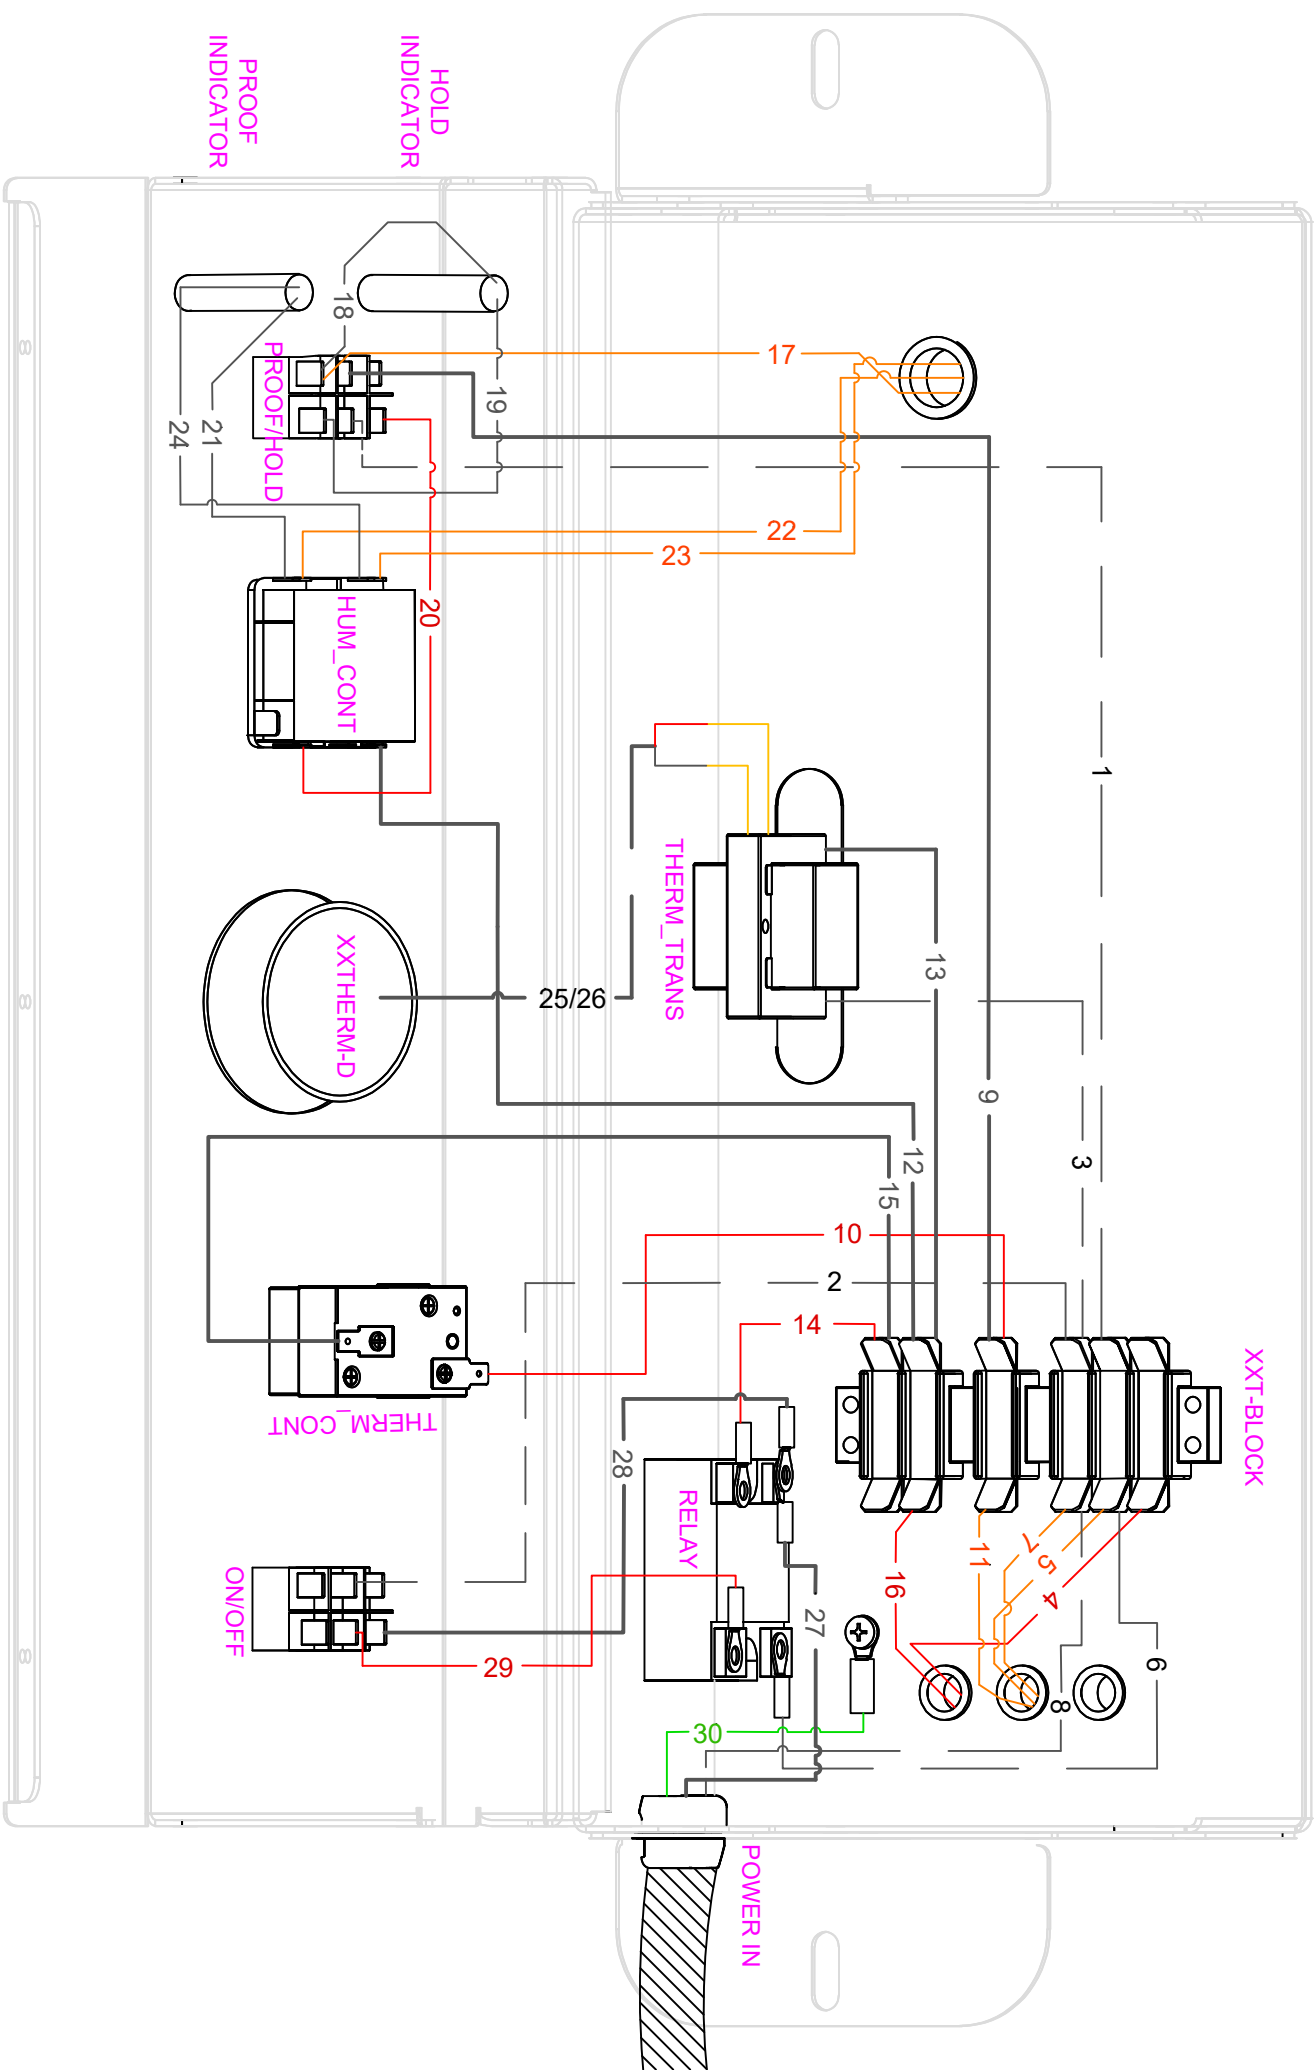

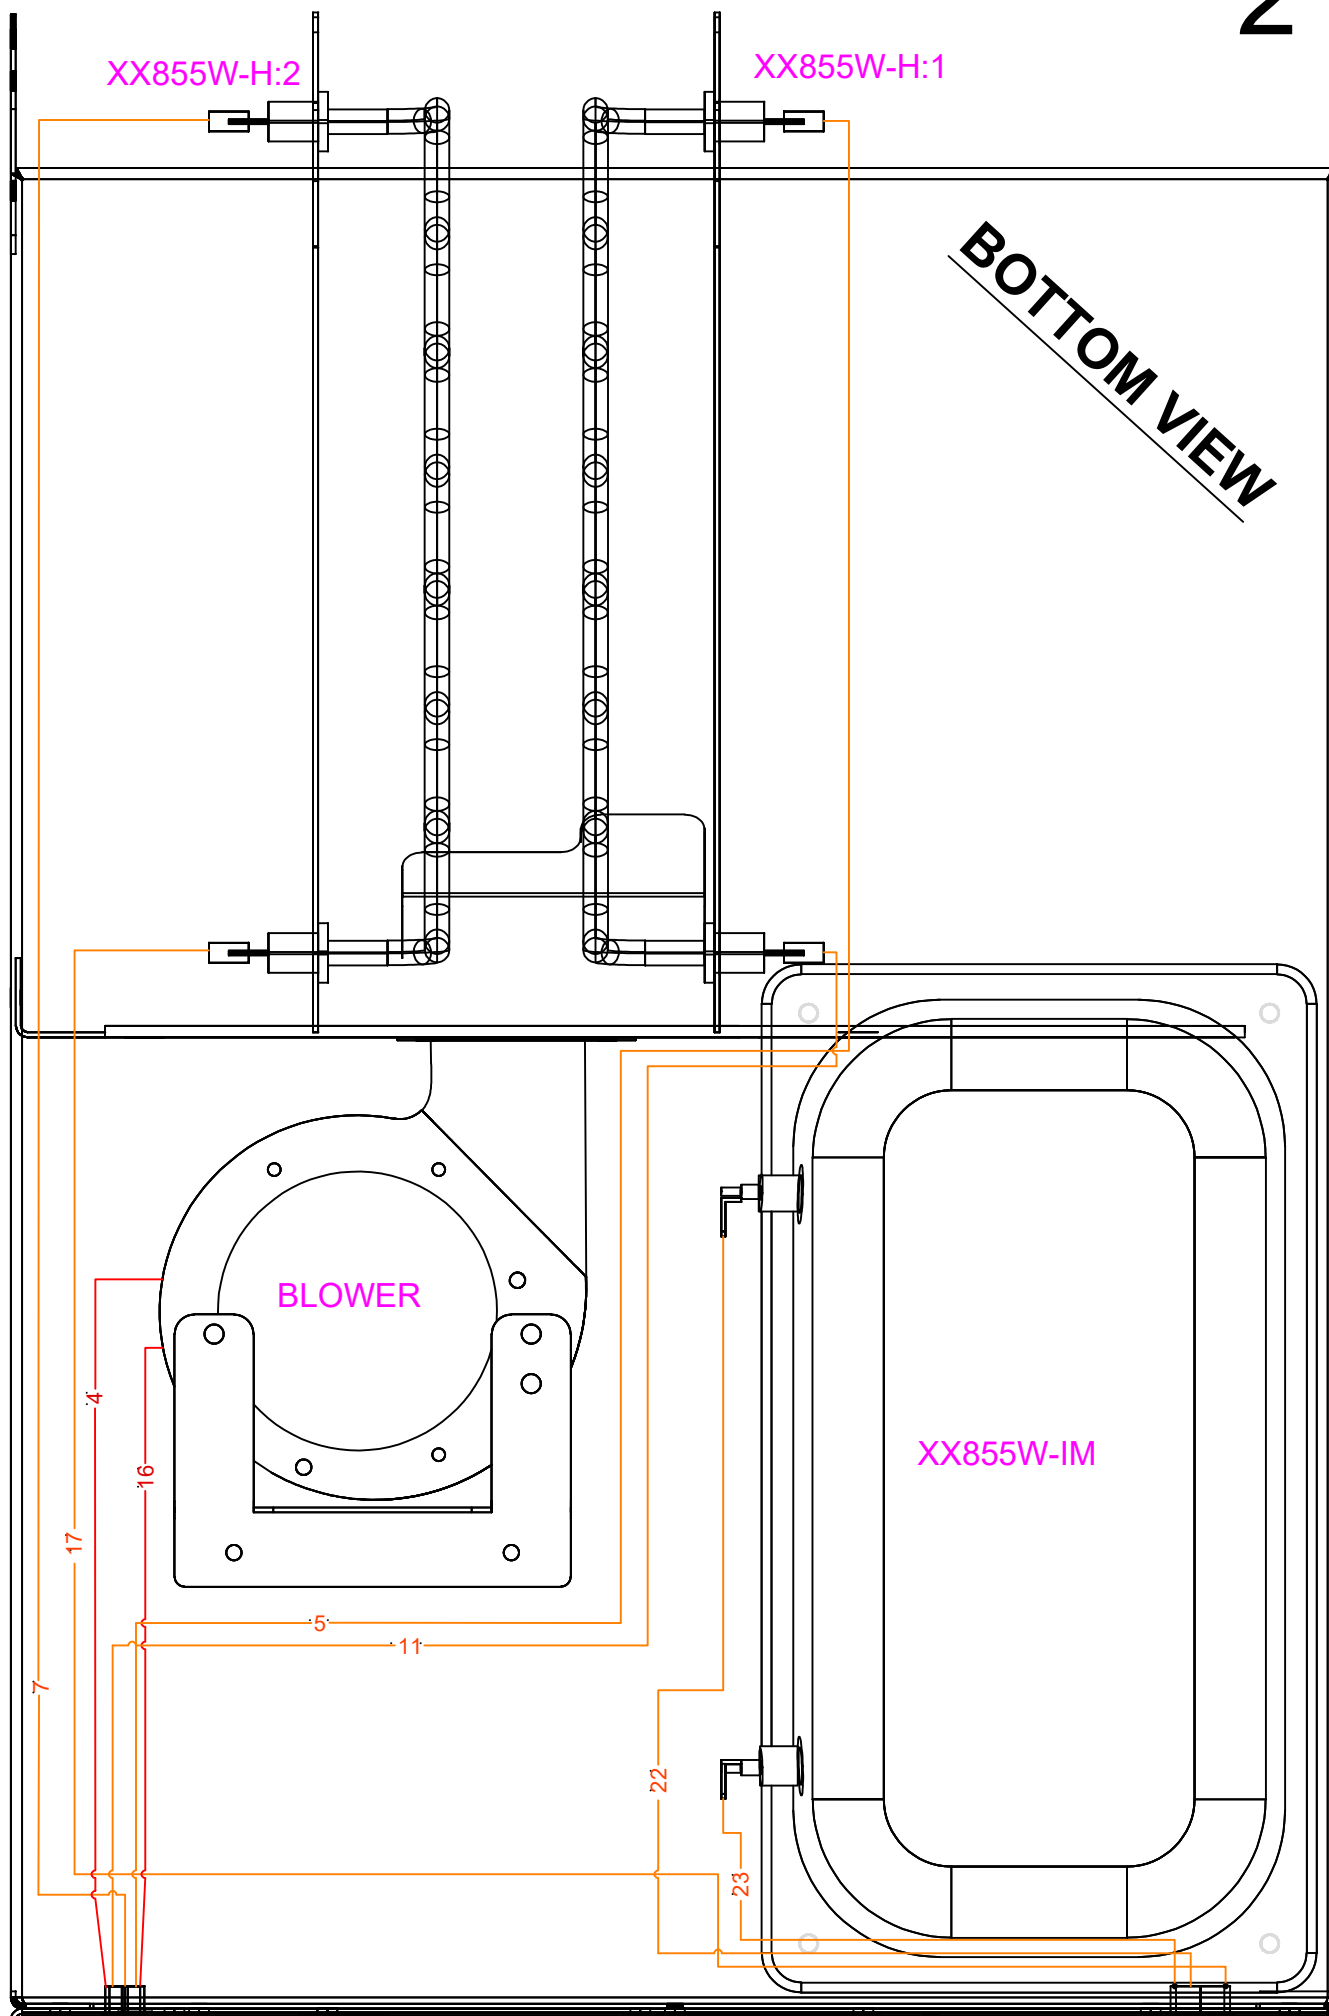

HHP-SB

