

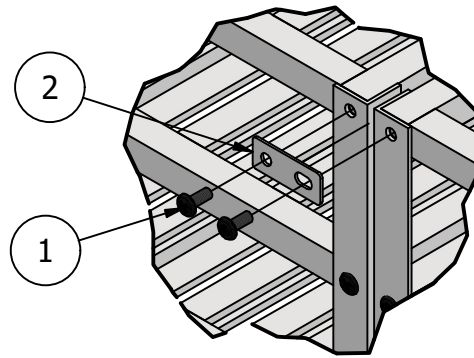


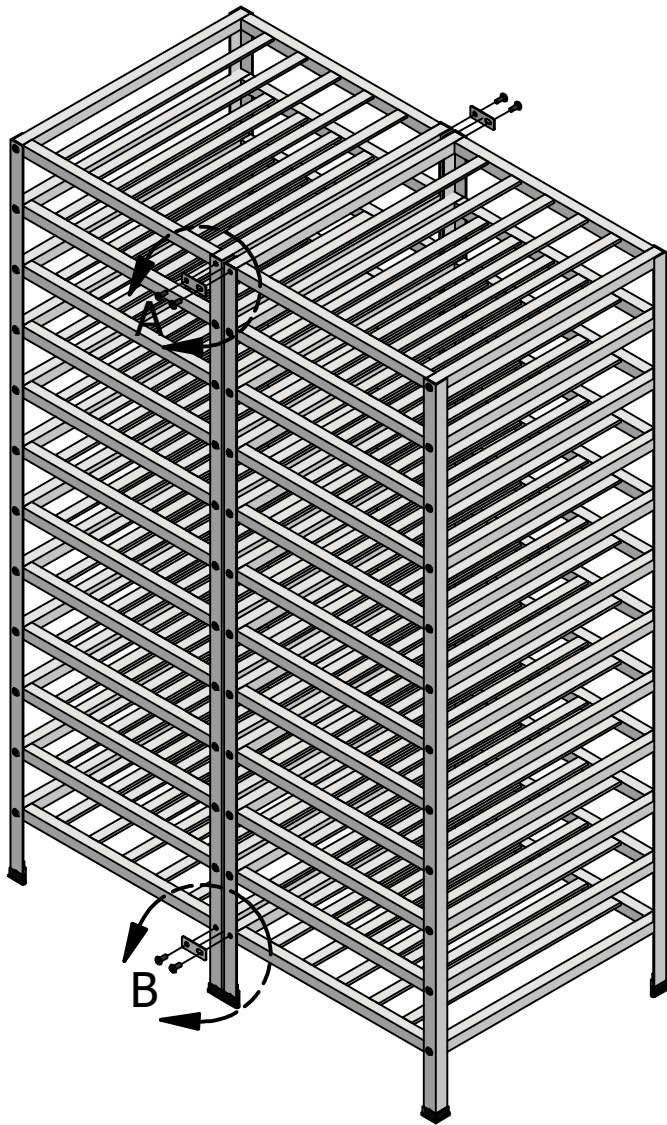

DETAIL A

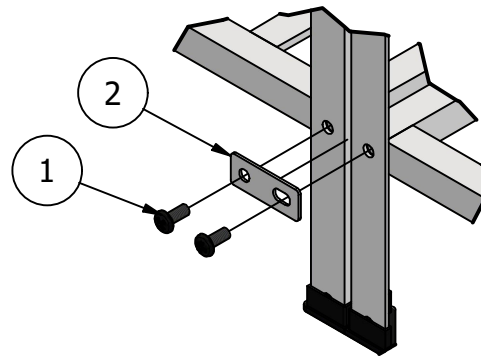


DETAIL B

STEP 1:
REMOVE THE (4) XS86 SCREWS
IN THE CORRESPONDING POTIONS
OF DETAIL A & B

STEP 2:
USE THE REMOVED XS86 SCREWS TO
FASTEN MOUNT-AWR-STRAP TO THE
RACK ASSEMBLY AT TOP AND BOTTOM

STEP 3:
REPEAT PROCESS ON BACK SIDE OF RACK

**1 SET OF 4 STRAPS
HARDWARE NOT INCLUDED**

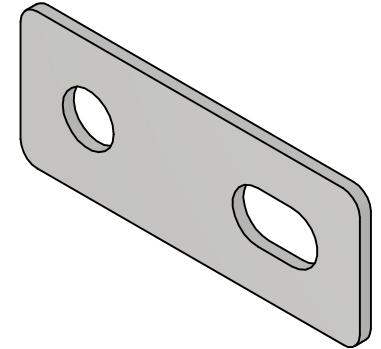

ADJUSTMENT SLOT

PARTS LIST

ITEM	QTY	PART NUMBER
1	8	XS86 (HARDWARE NOT INCLUDED)
2	4	MOUNT-AWR-STRAP

THIS DRAWING IS THE PROPERTY OF LOCKWOOD MANUFACTURING COMPANY, AND IS LOANED SUBJECT TO THE CONDITION THAT IT IS NOT TO BE COPIED, REPRODUCED OR DISTRIBUTED EITHER IN WHOLE OR IN PART, AND IS NOT TO BE USED, DIRECTLY OR INDIRECTLY, EXCEPT BY PERMISSION OF OR UNDER SUPERVISION OF LOCKWOOD MANUFACTURING COMPANY.



LOCKWOOD MANUFACTURING
31251 INDUSTRIAL RD, LIVONIA, MI 48150 | 734-425-5330

			DO NOT SCALE		MOUNT-AWR-STRAP		
			UNITS	SIZE			
DRAWN	Mitchell H.	7/18/2025	INCHES	A			
CHECK			DWG NO.			REV	
MFG			MOUNT-AWR-STRAP				SHEET 1 OF 1